

OPERATING INSTRUCTIONS W1400

POWER ON

1. Power the unit up by switching the On/Off Switch on the back into the ON position.
(*Leave the system for a minute to warm up*)

ZERO CALIBRATION

1. With the vehicle empty, raise the body into the correct weighing position.
(*This should be when the body is clear of the chassis*)
2. Adjust the **FINE ZERO** knob on the back into the centre position.
3. Adjust the **COURSE ZERO** pot on the back, until the display shows 00.0

SPAN CALIBRATION

1. With the vehicle carrying a known weight, raise the body into the weighing position.
2. Adjust the **SPAN** pot on the back of the display, until the display shows the correct weight.

ZERO TRIMMING

1. If the display does not read zero when empty and in the weighing position, the **FINE ZERO** knob can easily be turned until the display shows 00.0